









## **IMPORTANT NOTES**


In addition to reference dimensions, allowance must be made for isolation valve, piping and button.


No sealing compound, paste, flux or solvent to be used in contact with plastic or rubber surfaces to avoid damage. Rubber washers will provide adequate seal. PTFE tape may be used on threads. Do not over tighten plastic nuts. No chemical block/ additive to be used in this cistern.


Installation to a masonry substrate shown for visual purposes. This procedure is transferable across other installation applications i.e. furniture. Ensure that suitable fixings are used for the required application.

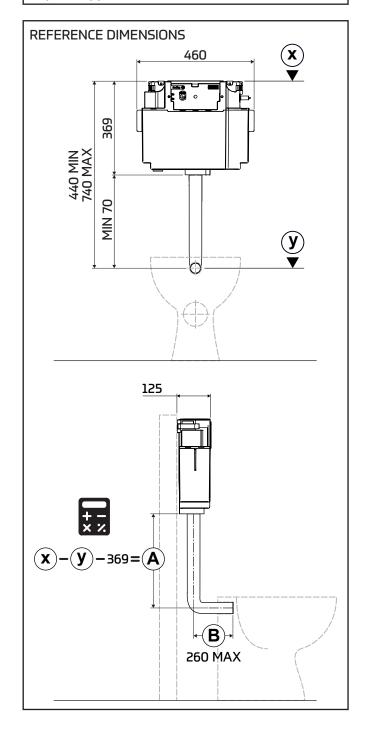


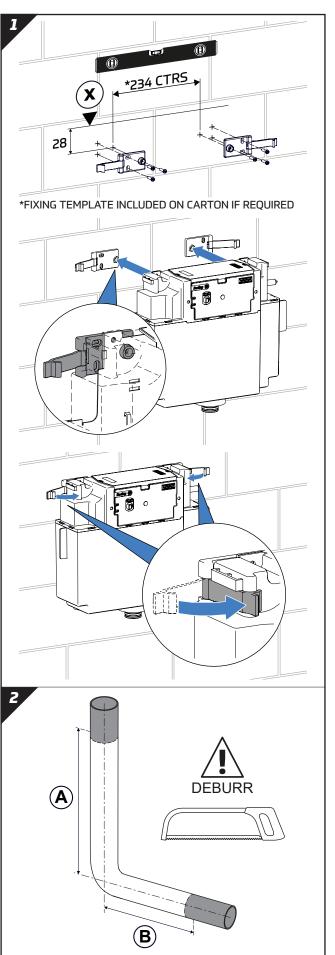

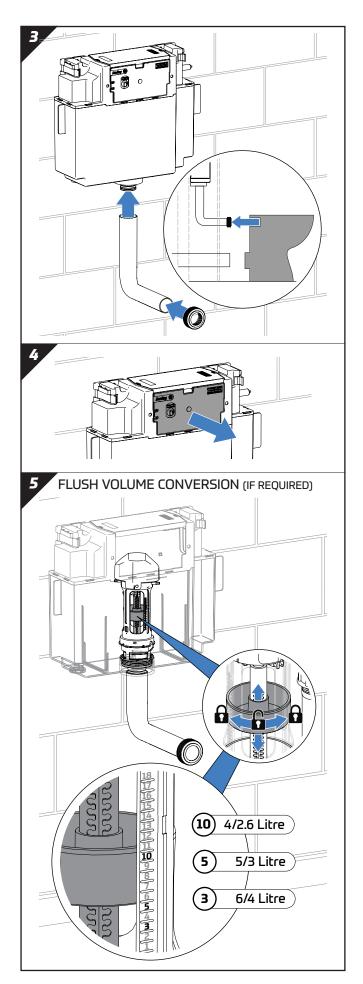

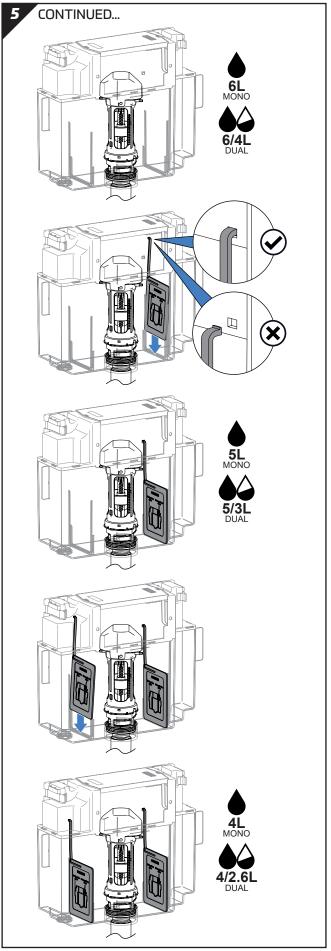


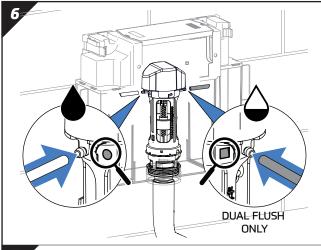


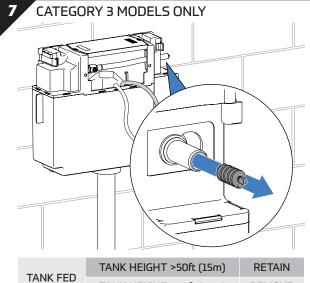

TANK HEIGHT <50ft (15m)

PRESSURE >1.5 bar

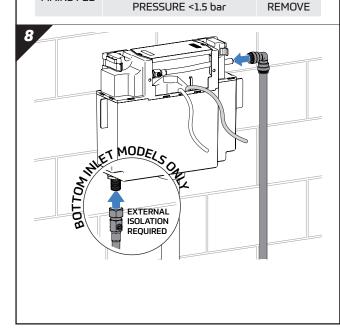





## **t** +44 (0)121 557 5411

- **f** +44 (0)121 557 5345
- e info@thomasdudley.co.uk
- w www.thomasdudley.co.uk/plumbing

REMOVE

RETAIN

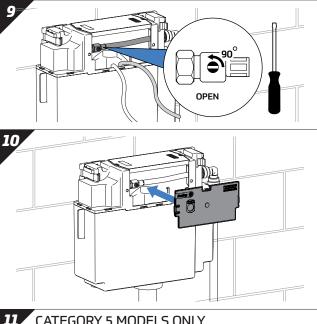

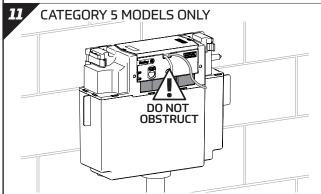

## Final Installation Checklist

- Check moving components are not obstructed and move freely.
- ~ Check connections are secure and fixed correctly.
- ~ Check installation for leaks.
- Check water level aligns to that marked within cistern, fine adjust if necessary.
- Hold the valve open (float down) to check overflow operation is sufficient.
- If the valve fails to shut off, the diaphragm & filter may require cleaning. Please refer to the Hydroflo service & maintenance guide as below.
- Visit thomasdudley.co.uk/plumbing for service & maintenance information.

MAINS FED