


IMPORTANT NOTES

Before installation flush supply pipes and ensure cistern is clean and free from debris. For use in cold water systems only.


No sealing compound, paste, flux or solvent to be used in contact with plastic or rubber surfaces to avoid damage. Rubber washers will provide adequate seal. PTFE tape may be used on threads. No chemical block/additive to be used in this cistern.

Do not over-tighten plastic fasteners. Hand tight + ¼ turn is recommended and should provide an adequate seal..


1a BOTTOM INLET

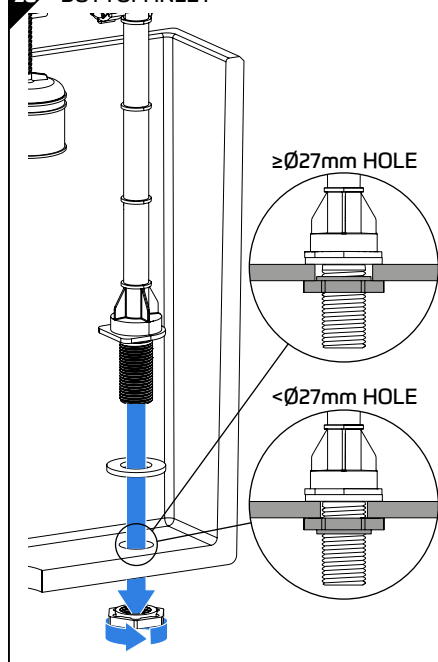


1b SIDE INLET

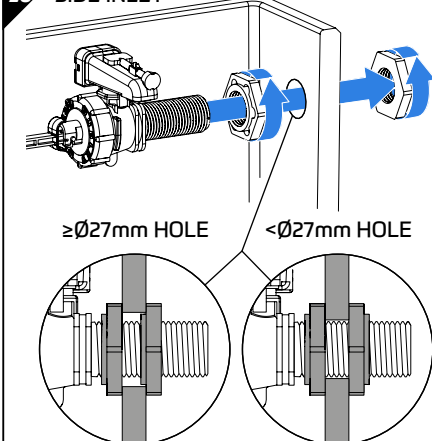



2 TELESCOPIC MODELS ONLY

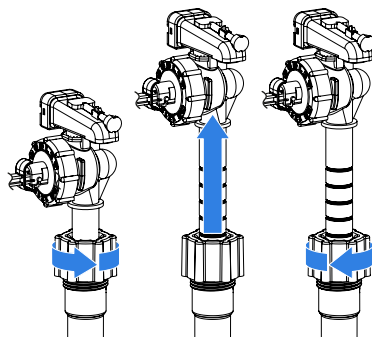


3a STANDARD FLOAT

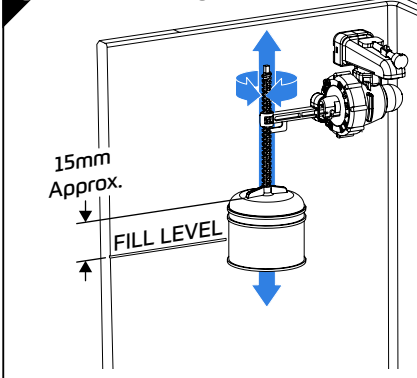


3b COMPACT FLOAT

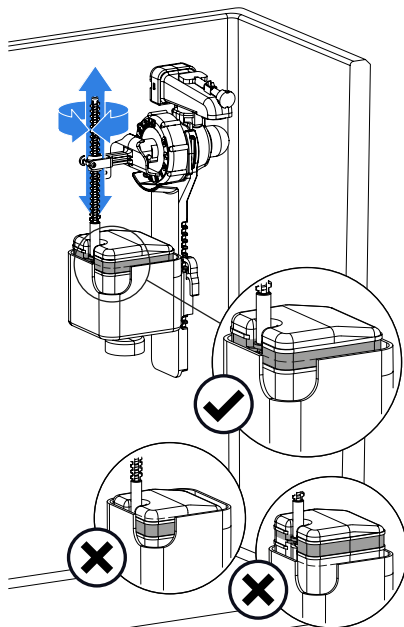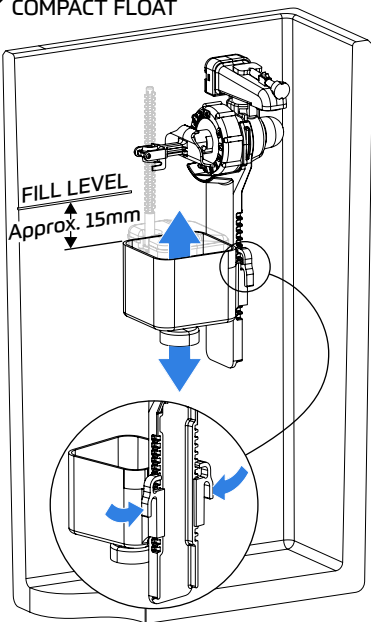

4

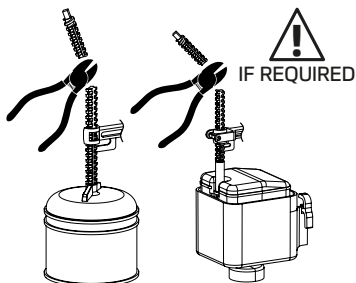

5

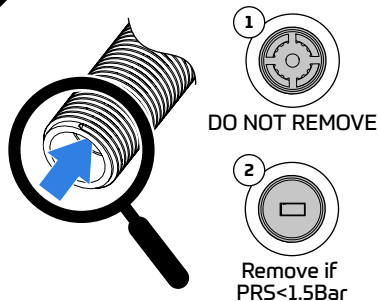

6

Final Installation Checklist

- ~ Check moving components are not obstructed and move freely.
- ~ Check connections are secure and fixed correctly.
- ~ Connect and turn on water supply.
- ~ Check installation for leaks.
- ~ Check water level aligns to that marked within cistern, fine adjust if necessary.
- ~ Hold the valve open (float down) to check overflow operation is sufficient.
- ~ If the valve fails to shut off, the diaphragm & filter may require cleaning. Please refer to the service & maintenance guide as below.
- ~ Visit thomasdudley.co.uk/tyde/category/inlet-valves for service & maintenance information.

TYDE

295 Birmingham New Road
Dudley, West Midlands
United Kingdom
DY1 4SJ

A Thomas Dudley Business

t +44 (0)121 557 5411

f +44 (0)121 557 5345

e info@tyde.co.uk

w www.thomasdudley.co.uk/tyde

© 2020 TYDE_R327957_12499 Iss H

TYDE
fluid
movement




IMPORTANT NOTES

Before installation flush supply pipes and ensure cistern is clean and free from debris.


No sealing compound, paste, flux or solvent to be used in contact with plastic or rubber surfaces to avoid damage. Rubber washers will provide adequate seal. PTFE tape may be used on threads. No chemical block/additive to be used in this cistern.

Do not over-tighten plastic fasteners. Hand tight + ¼ turn should provide an adequate seal (8Nm recommended).


1a NEW INSTALL

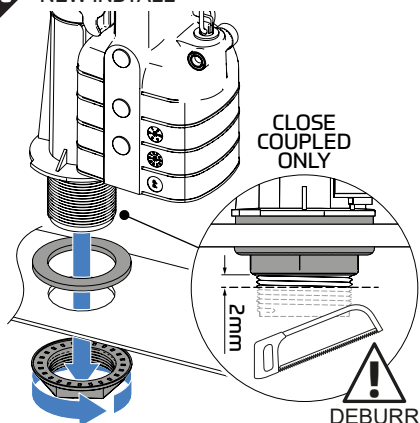


1b RETRO-FIT

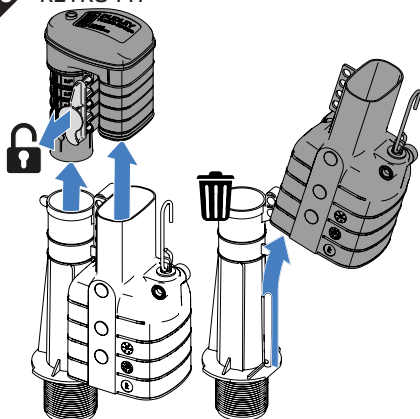


CONTINUED...

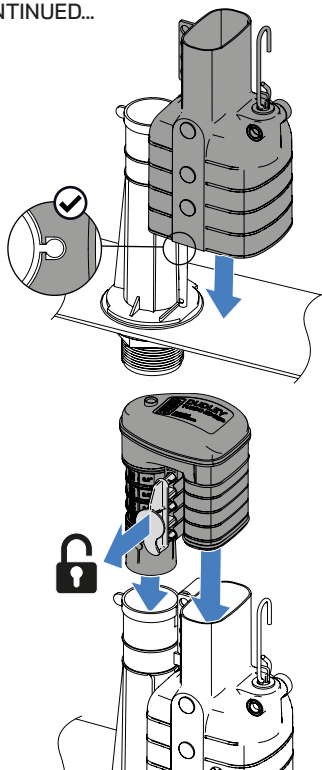


2

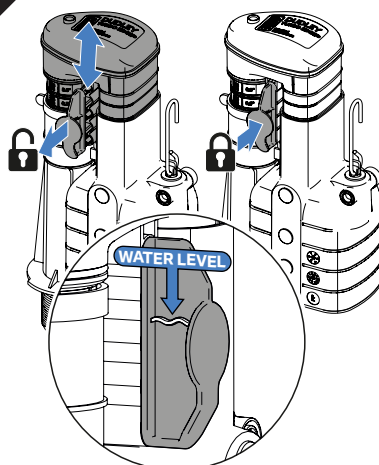

3

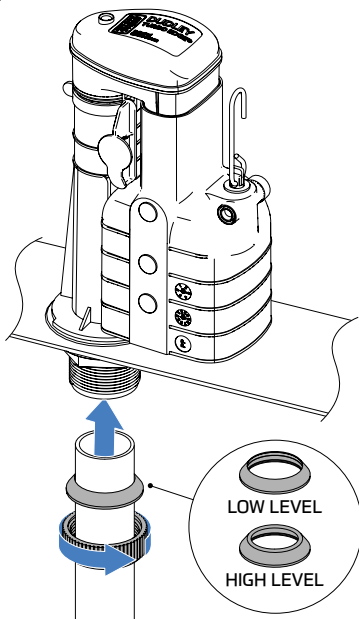


4

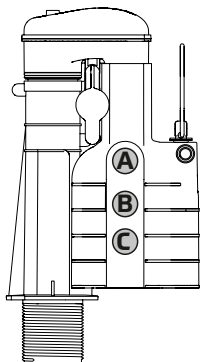

FLUSH VOLUME	CONFIGURATION
MIN.	Only 'A' OPEN
LOW	Only 'B' OPEN
HIGH	Only 'C' OPEN
MAX.	All positions CLOSED

5

MONO FLUSH CONVERSION (IF REQUIRED)

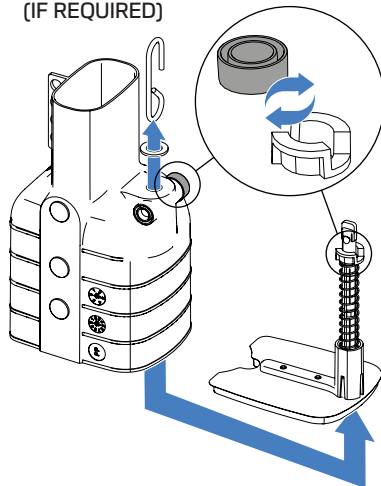

6

Final Installation Checklist

- ~ Check moving components are not obstructed and move freely.
- ~ Ensure lever connection is not in tension and allows syphon piston to fully return when at rest.
- ~ Check connections are secure and fixed correctly.
- ~ Connect and turn on water supply.
- ~ Check installation for leaks.
- ~ Check water level aligns to that marked on cistern and is as close as adjustment allows to water level marked on syphon snap pin.
- ~ Hold the valve open (float down) to check overflow operation is sufficient.
- ~ Installer to ensure cistern complies with UK water regulations.
- ~ Visit www.tyde.co.uk for service & maintenance information.

TYDE

295 Birmingham New Road
Dudley, West Midlands
United Kingdom
DY1 4SJ

A Thomas Dudley Business

t +44 (0)121 557 5411

f +44 (0)121 557 5345

e info@tyde.co.uk

w www.thomasdudley.co.uk/tyde



© 2020 TYDE_SISLF372602_15125 Iss E