


**IMPORTANT NOTES**

Before installation flush supply pipes and ensure cistern is clean and free from debris. For use in cold water systems only.


No sealing compound, paste, flux or solvent to be used in contact with plastic or rubber surfaces to avoid damage. Rubber washers will provide adequate seal. PTFE tape may be used on threads. No chemical block/additive to be used in this cistern.

Do not over-tighten plastic fasteners. Hand tight +  $\frac{1}{4}$  turn is recommended and should provide an adequate seal.


**1**

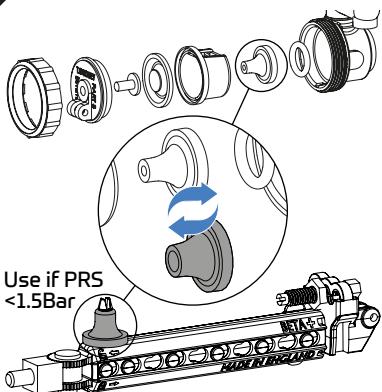

**2 TELESCLIC MODELS ONLY**

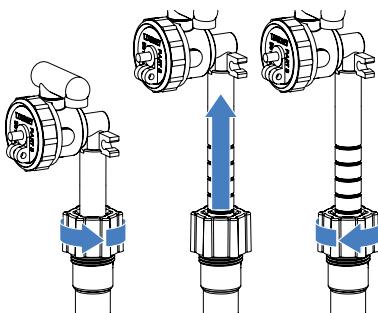


**3**

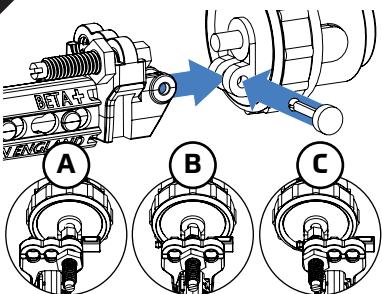


**4**

**BOTTOM INLET**


$<\varnothing 27\text{mm}$  HOLE

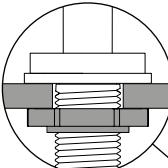


$\geq\varnothing 27\text{mm}$  HOLE

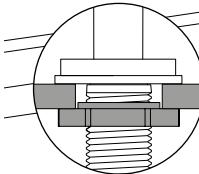


**SIDE INLET**

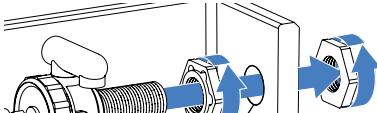

$<\varnothing 27\text{mm}$  HOLE

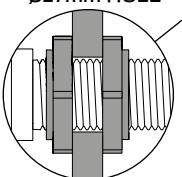


$\geq\varnothing 27\text{mm}$  HOLE

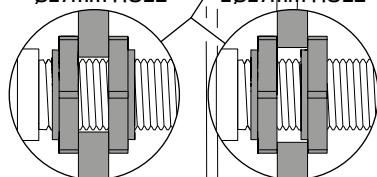


**5**


**BOTTOM INLET ONLY**

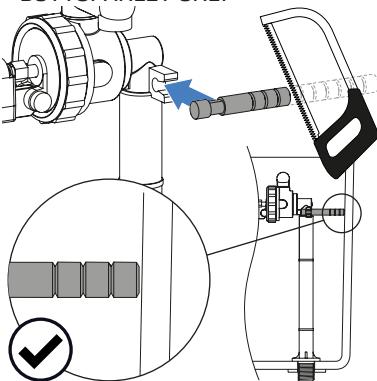


6

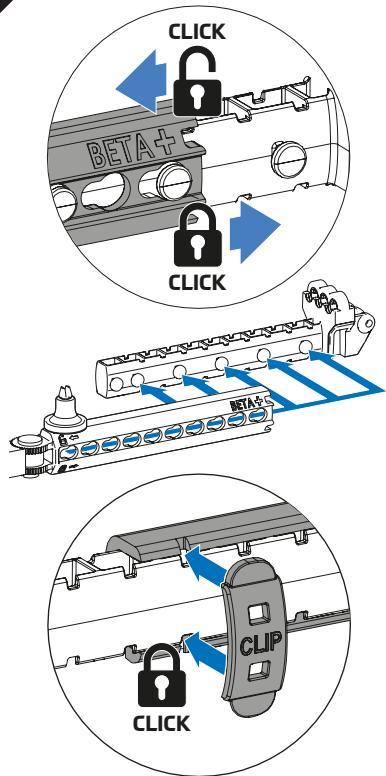

7

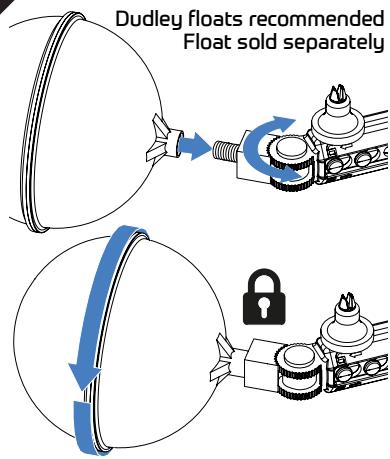

8

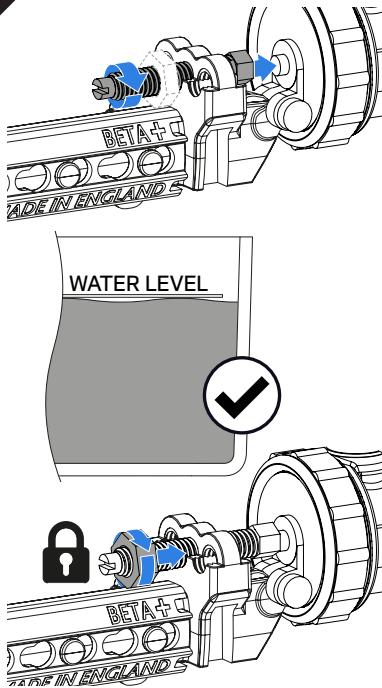

9

### Final Installation Checklist

- ~ Check moving components are not obstructed and move freely.
- ~ Check connections are secure and fixed correctly.
- ~ Connect and turn on water supply.
- ~ Check installation for leaks.
- ~ Check water level aligns to that marked within cistern, fine adjust if necessary.
- ~ Hold the valve open (float down) to check overflow operation is sufficient.
- ~ Visit **thomasdudley.co.uk/plumbing** for service & maintenance information.

© 2025 TD\_SISLF375084\_15124 Iss E

**Thomas Dudley**

**295 Birmingham New Road**  
**Dudley, West Midlands**  
**United Kingdom**  
**DY1 4SJ**

**t +44 (0)121 557 5411**  
**f +44 (0)121 557 5345**  
**e info@thomasdudley.co.uk**  
**w www.thomasdudley.co.uk/plumbing**

**T H O M A S**  
**D U D L E Y**

